


## USB Video Capture - Quick Installation Guide

The Video USB Adaptor allows you to connect your Gardenature wired or wireless camera to a PC / MAC or Laptop via the USB 2.0 port.

An internet connection and a CD drive is required to load the drivers and software for the first time.

As a universal product there are additional options which allow you to record your favourite movies, TV shows, or live video from other analogue video sources onto your computer. You can watch live, record, edit and make movies, convert and upload files to share on social media etc.

### Connection Guide

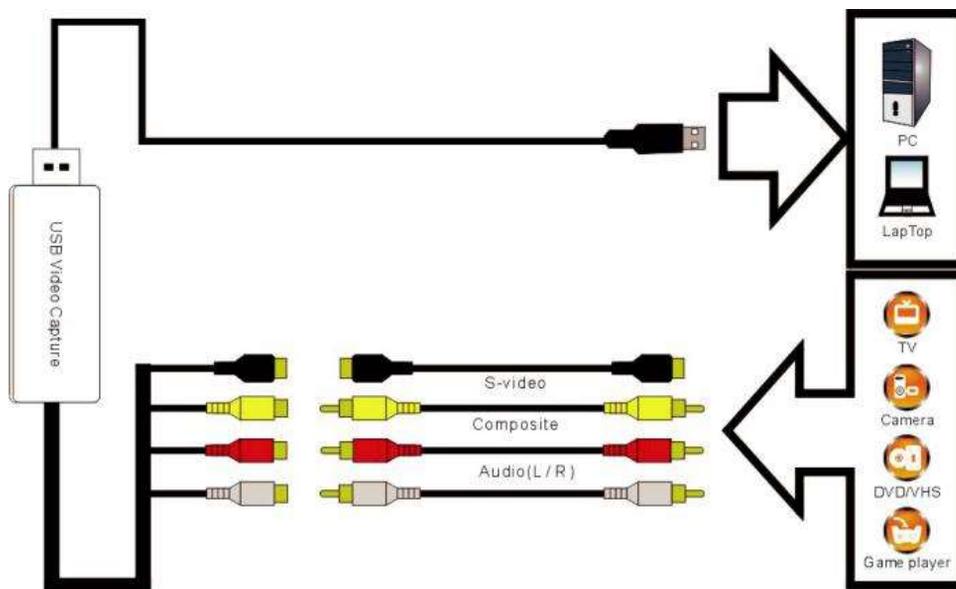

Please read through all instructions before starting as we have provided PC & MAC guidelines to suit your required application.

## Driver Installation

Insert the Software CD into your CD drive and follow these prompts **before** you connect the **USB Video Capture** to your computer.


The installation window should display.

### Installing the Drivers




When you click on the Install Driver button, the installation will begin.

Click on 'Next'

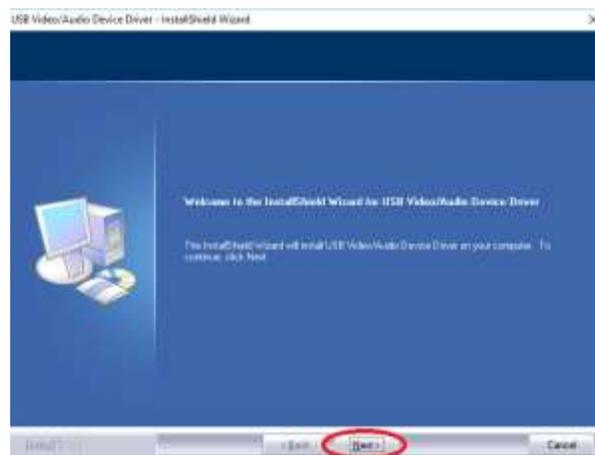

When this has completed, click on 'Finish'

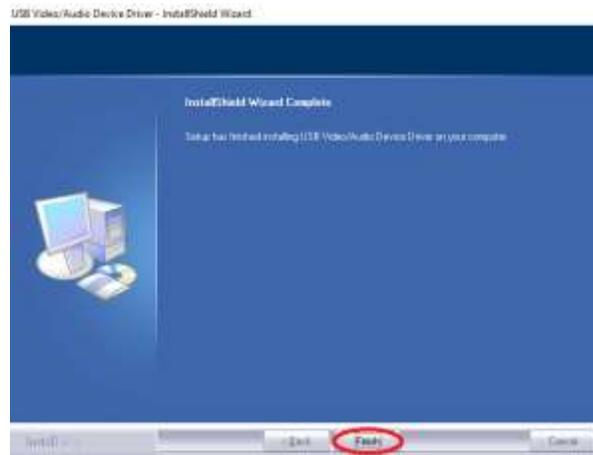

Restart your computer and then reload the EzCap CD

## Software Installation


From the main menu click on 'Install ShowBiz 3.5'



Select your language, then click OK



Click 'Next'

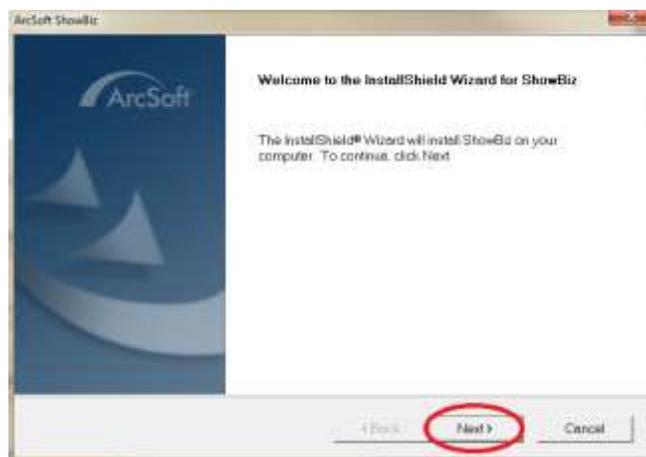

Once you have read the terms and conditions click 'Yes'



You will need to add a user /device name and then input the appropriate Licence Key; this can be found on the back of the CD envelope.

There are two Licence keys: Select either PC or MAC

ArcSoft is for a **PC**

MAC Video Grabber is for a **MAC** (See MAC Driver & Software Installation below)


.




Click 'Next'




This is what the software folder will be called. We recommend keeping it as ArcSoft ShowBiz. Then click 'Next'

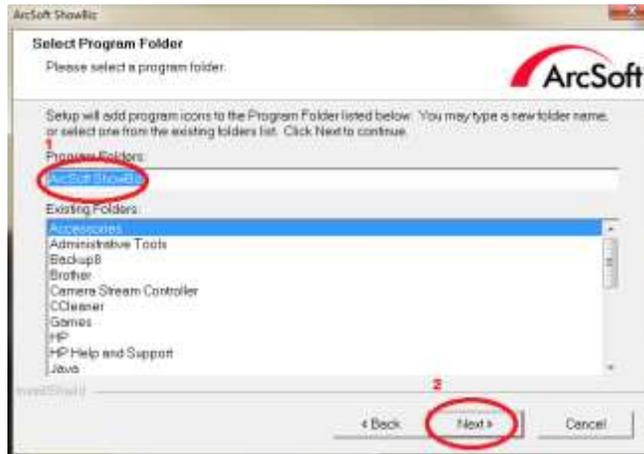

This will now start the installation and may take a few minutes

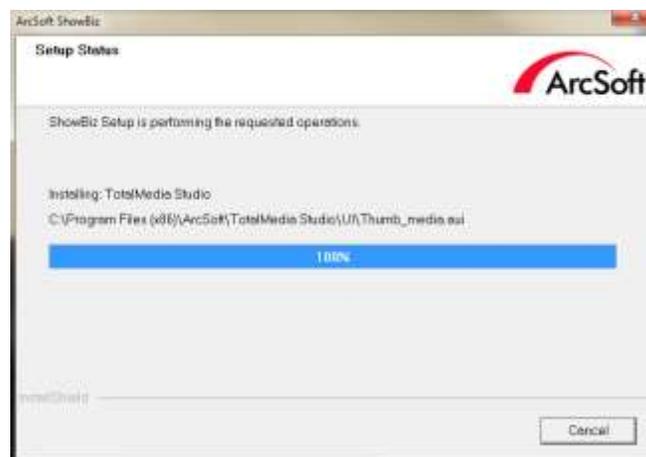

When it reaches 100% you're all done! Click 'Finish'

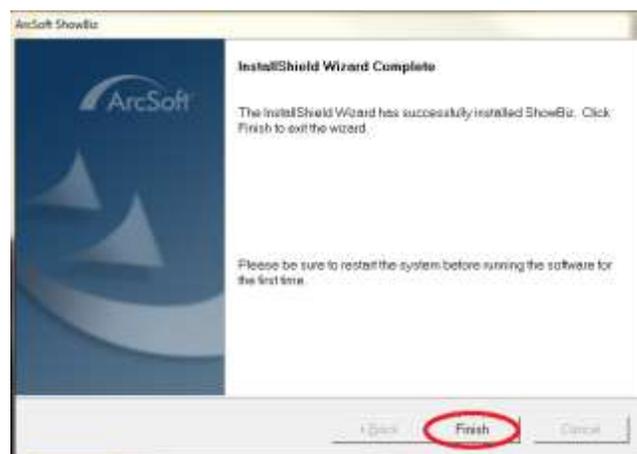

An Icon will have been placed on your desktop.

## **MAC Driver and software Installation**

Insert the Software CD into your CD drive.

*(If you do not have a CD drive we have found the following Debut Video Software to work:  
<https://debut-video-capture-software-for-mac.en.softonic.com/mac>)*

Double click “Video Grabber for MAC OS X1.6.0” and start to install the driver and application for MAC.

Click ‘Continue’ when ‘Install Succeeded’ appears please restart your MAC.

Connect the Video Capture device into a USB 2.0 port, the wizard will find ‘new hardware installed’ to your computer.


You should then see the following screen

double click ‘ezcap VideoCapture.app’




**In the next screen you will need to add a user /device name and then input the appropriate Licence Key; this can be found on the back of the CD envelope.**

**There are two Licence keys: Select ‘MAC  
Video Grabber’**

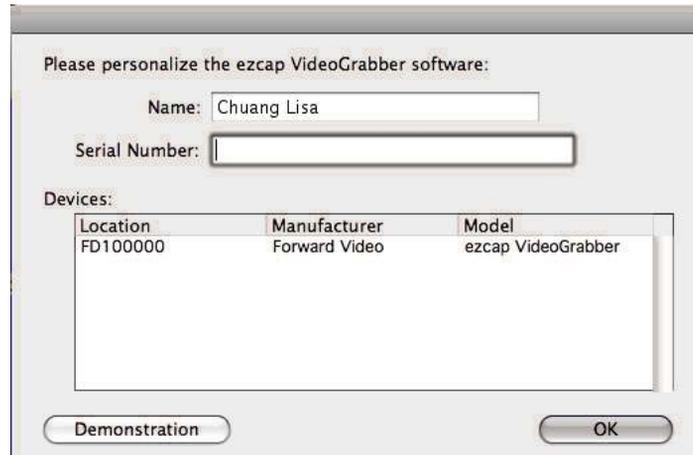

If you need to check the drivers are installed correctly please go to  
'Apple logo'>'About this Mac'>'More info'>'Hardware'> 'USB'.

If the driver is installed correctly you should see the "USB VIDBOX FW Audio". If not, then it means that the driver has not installed correctly. You will need to remove the driver and disconnect the USB 2.0 Video Capture from the computer and install the driver again.

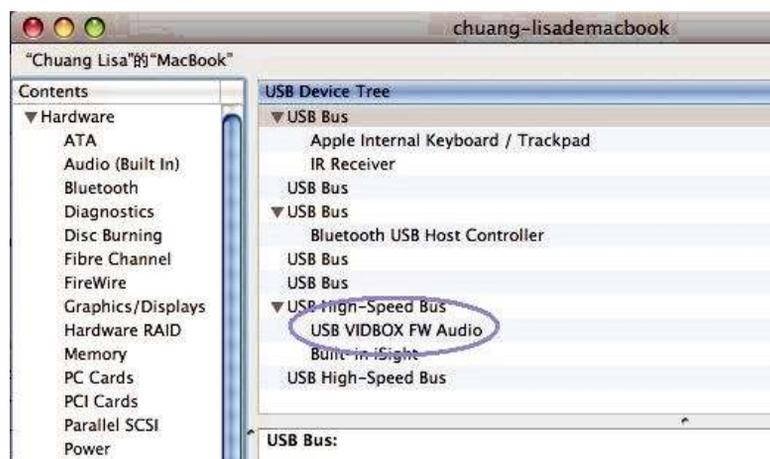

## MAC Software Guide

Click “Go” and select “Applications”, double click “ezcap VideoGrabber”, and a window will appear.

Please double click “ezcap VideoGrabber”, a message will appear, click “OK”.

Select “Digitizers” and “ezcap VideoGrabber” as below.




Click “Record” and select “Video Settings” on the application window as shown below.



The following window will appear,

Click on the 'Source' tab then 'Composite' as this is your Gardenature video source, then select 'OK'.

You should now see the video screen of the source in the video window.

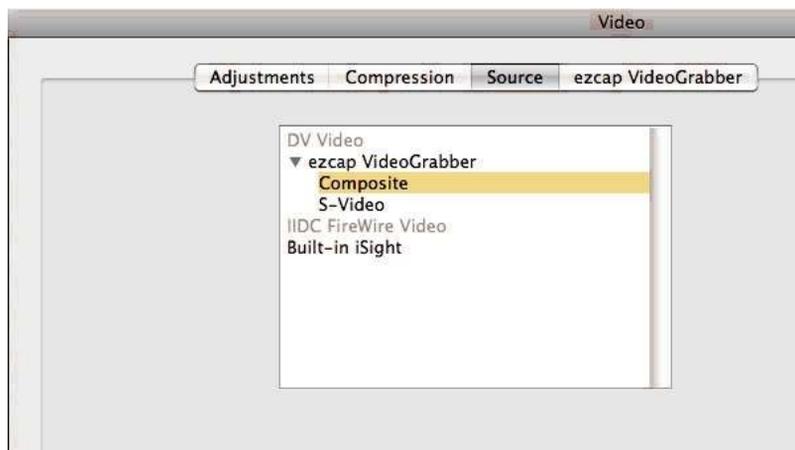

Click "Record" \ "Sound Settings" \ "Source" \ "USB VIDBOX FW Audio", and then click "OK". You should now hear the audio of your inputted audio source (if the camera has a mic)

